



REPLACING THE FLASHTUBE in your Einstein™ Flash Unit

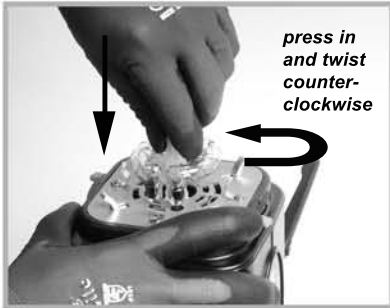


Removing the frosted glass dome



Removing the modeling lamp

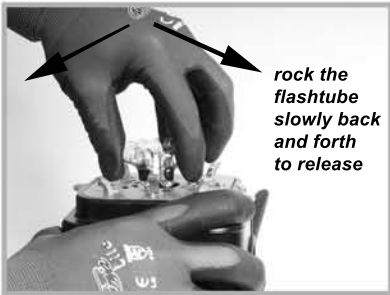

Removing the flashtube

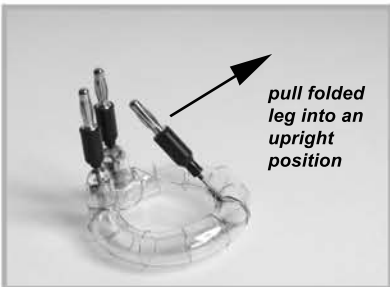

Preparing the new flashtube



Installing the new flashtube

When replacing the flashtube in any flash unit, **always ensure that the flash unit is turned OFF** and unplugged from the AC power source before proceeding.

Never handle your flashtubes or modeling lamps with your bare hands. Wear cloth or insulated gloves or use a piece of cloth when handling the tubes and lamps. Skin oils can cause uneven heating of the flashtube or modeling lamp surface and can lead to premature failure. Please note that your flashtubes are very fragile and should be handled with care. The legs on each flashtube fit snugly into the sockets on the faceplate and should not be forced in or out of the unit.

1. **Turn your flash unit OFF and unplug the power cord from the AC power source.** Wait at least five minutes to ensure that the unit does not have any power stored in the capacitors before handling it. You may want to wait longer if you have been actively using the unit.
2. **Remove the frosted glass dome (if using).** To remove the dome, bend two adjacent spring clips on the faceplate outward, then pull the dome away from the other two clips and off the unit. *Do not remove the screws that hold the spring clips in place.*
3. **Remove the modeling lamp.** Press in on the lamp and twist counterclockwise, then pull the lamp out.
4. **Remove the exhausted flashtube.** Grip the outer ring of the flashtube and gently pull it out of the sockets on the faceplate of the unit, using a slow and careful rocking motion to release all three contacts.
5. **Install the new flashtube.** Your new flashtube arrives with one of its legs folded down, so you must first pull this leg into an upright position. Then, line up the flashtube's three metal legs with the three corresponding sockets on the unit's faceplate, and insert the new flashtube by slowly pressing and rocking the tube until it is seated all the way down in the unit.
6. **Replace the modeling lamp.** Gently press the modeling lamp into the socket and twist clockwise to secure.

You can test fire the unit to see that the flashtube has been properly replaced as well. When the "READY" screen turns green, press the TEST button to test fire the unit. A properly replaced tube will flash immediately.

If you have questions, need assistance or experience any problems, please email or call us! We're here Monday through Friday, from 9:00 am to 5:00 pm, CST.

Paul C. Buff